



FieldServer Driver FS-8700-95 Notifier NFS 3030

Description

The NFS-3030 Serial driver allows the FieldServer to record data from Notifier Onyx Series NFS-3030 Fire Panels over RS-232.

The FieldServer acts as a Passive Client receiving messages and recording the status of a Notifier 3030 Fire Alarm Panel. There is no active polling by this driver; the communications are one-way through the panel's printer port.

This driver is not capable of emulating a Notifier NFS-3030 panel and the very limited server functionality has only been implemented to facilitate FieldServer's Quality Assurance program.

The main purpose of this driver is to record the status of Fire Alarm System detectors and Modules in data arrays - one data array per loop. It is limited by the information that the Notifier NFS-3030 unit sends in the form of text messages through its RS-232 printer port. The accuracy and timeliness of the data is therefore limited to the frequency of update messages that the Notifier Fire Panel issues. The types of Notifier messages supported by this driver are summarized later in this fact sheet. As well, a detailed table in the manual shows each type of NFS-3030 message the FieldServer recognizes and the effect that it has on the status of points in the data array. The device status to the data array mapping is also provided in the manual.

Fieldserver Mode	Nodes	Comments
Client	1	Each FieldServer port can connect to only 1 NFS 3030 panel
Server	0	The NFS 3030 driver cannot be used as a Server.

Formal Driver Type


Serial
Passive Client

Connection Information

Connection type: RS-232
Baud Rates: 9600
Data Bits: 8
Stop Bits: 1
Parity: None
Multidrop Capability No



Connection configurations

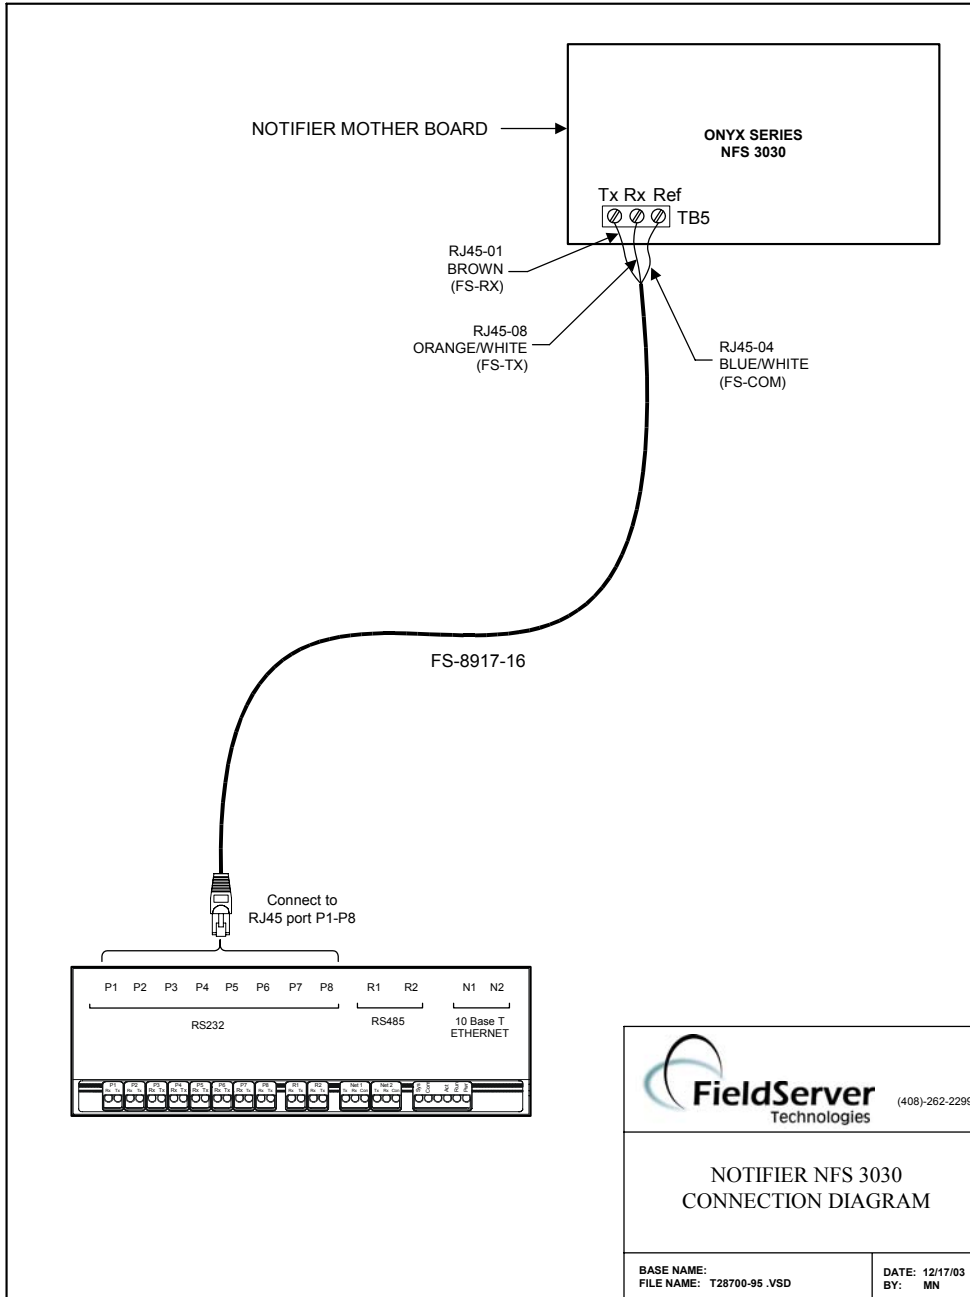

Connection Notes

- The Notifier NFS 3030 printer port must be enabled to 80-columns (non-supervised) before communications is possible.



Message Types Supported

This driver was designed to be connected to the Notifier Onyx NFS-3030 printer port, and listen for incoming messages. The panel's default setting for the printer port is off. To utilize this driver, the printer port must be enabled to 80-columns, unsupervised, before this driver can be used.

The primary purpose of this driver is to record the status of devices connected to the NFS-3030 system by interpreting the text messages sent to the printer port. Not all messages will be interpreted, as many messages do not directly pertain to device status, or are currently supported. The following subset of event messages is recognized:

Active Events:	
FIRE ALARM	
TROUBLE	
PREALARM	
SECURITY ALARM	
SUPERVISORY	
DISABLED	
ON/OFF	<i>detectors, modules, panels only</i>
ACTIVE	

A detailed mapping of message interaction System Trouble messages provided by Notifier at the time this driver was written is tabulated in the NFS 3030 Driver Manual. Any changes or additions by Notifier will not be reflected in this driver unless specifically revised.

Zone Status:

Information about zone status that is incorporated with point status messages will not be recorded by this driver. A device can belong to multiple zones; however, only the primary zone is listed in printer output. This limits, severely, the accuracy of zone data based on event generated messages, and therefore will not be recorded.

However, zone DISABLED messages will be recorded by the driver as there is no ambiguity in their status.



Panel Status: Data Array Mapping:

The status of NFS 3030 devices will be recorded into a series of data arrays within the FieldServer, and are available for reading by any other connected device. The data from each loop will be recorded into a separate data array, and a single system array will record system troubles and disabled zones. The structure of the data arrays is provided below.

Most of these arrays will only contain binary information to represent an active or inactive state. However, there could be multiple troubles associated with a single device. For each trouble message, the data array register corresponding to a particular device will be incremented as a counter and decremented when a trouble is cleared.

Parameter	Registers (float)	
<i>{per loop}</i>		
Fire Alarm	0-199	detectors
	200-399	modules
Trouble <i>each point will increment/decrement the number of troubles recorded, system normal will reset the counter to zero</i>	500-799	detectors
	700-899	modules
PreAlarm	1000-1199	detectors
	1200-1399	modules
Security Alarm	1500-1799	detectors
	1700-1899	modules
Supervisory	2000-2199	detectors
	2200-2399	modules
Disabled	2500-2799	detectors
	2700-2899	modules
On/Off	3000-3199	detectors
	3200-3399	modules
Active	3500-3799	detectors
	3700-3899	modules
<i>{system points only}</i>		
System Troubles	0-100	
Disabled Zones	1000-1999	General Zones
	2000-2099	Releasing Zones
	2100-2199	Trouble Zones
Panel *note: some of these data arrays are not appropriate for panels but arranged in this fashion for symmetry in message parsing	3000-3099	Fire Alarm
	3100-3199	Trouble
	3200-3299	*
	3300-3399	Security Alarm
	3400-3499	*
	3500-3599	Disabled
	3600-3699	On/Off
3700-3799	*	



Driver Limitations & Exclusions

- General zone disabling will be recorded, but zone information related to corresponding alarm, trouble, pre-alarm, security alarm, supervisory, and on/off will not be recorded
- Synchronization between the NFS 3030 panel and the FieldServer can only occur while the panel is in SYSTEM NORMAL mode. At this time the FieldServer can be reset.
- Read point status data will not be recorded as this information is not available at the printer port
- Printer port must be enabled on the unit and set to 80 columns with NO supervision
- All data related to non-event driven printer reports will not be recorded by the FieldServer
- This driver was written specifically for the following Notifier 3030 firmware versions. Any changes or additions by Notifier will not be reflected in this driver unless specifically revised.
 Boot: 001.001.001 Dec 03 2002
 App: 001.005.001 Feb 28 2003
- Information about zone status that is incorporated with point status messages will not be recorded by this driver.
- This driver is not designed for multi-dropped panels; there can only be one panel connected to any given FieldServer port.
- This driver records data as presented to the printer port by the Notifier NFS3030, and can only be as accurate as this data.
- The driver cannot send any messages (including Ack, Reset and Silence) to the 3030 Panel.

Devices tested:

Device	Tested (FACTORY, SITE)
NFS-3030 Test Panel supplied by Notifier Corp.	Factory



Revision History

Date	Driver Version	Document Revision	Resp	Comment
5/26/03	1.00a	0	DNC	Preliminary Draft Created
5/26/03	1.00a	1	PMC	Minor Corrections
6/4/03	1.00a	2	DNC	Post developmental updates
6/6/03	1.00a	3	DNC	Modified connection diagram Issued for PMC Review
6/9/03	1.00a	4	PMC	Minor Corrections. Added limitation – Cannot send message to panel.
6/9/03	1.00a	5	DNC	Modified connection diagram per PMC
10/20/03	1.00	6	MF	Redraw connection diagram. Formatting
12/16/03	1.00	7	JD	Releasing